

Matrix-IV EHT Keys Metal Reader User Manual

1. OVERVIEW

Matrix-IV EHT Keys Metal Reader is used in ACS (Access Control Systems). The reader transfers EM-Marine, HID (Prox Card II) or Atmel 5557 (Temic) token codes into controller, or allows for entering the codes on its keypad. The codes are transferred via iButton™ (Dallas Touch Memory) or Wiegand-26/Wiegand-42 protocols.

The reader can distinguish the original contactless ID cards from their cloned copies. This allows to disable transferring the ID codes (numbers) of cloned cards into controller (Anti-clone Mode).

2. MOUNTING AND CONNECTION

The reader should be mounted on a flat surface, at a place where proximity cards can directly approach the reader (see Fig. 1).

<Figure 1. Dimensions and mounting holes>

To mount the reader, perform the following steps:

- Unscrew the screw at the bottom of the case and remove the back lid.
- Apply the back lid to the wall, to mark mounting holes locations.
- Drill the holes.
- Screw the back lid to the wall.
- Mount the reader and attach it with the screw at the case bottom.
- Connect the wires as per Table 1.
- To select the protocol for data transfer to controller, connect DATA0 and DATA1 wires as per Fig. 2.
- Insulate all the wires junctions.
- Power on the reader and verify its proper operation by touching it with a card.

Notes:

1. Do not install the readers within 10 cm from one another.
2. To work at specified line distance to controller, please use a UTP cable (e.g. a CAT5e cable):
 - When connecting via iButton, one wire of a twisted pair connects to GND and another to DATA0 terminals.
 - When connecting via Wiegand, first twisted pair connects to GND and DATA0, and the second to GND and DATA1 (See Fig. 2).

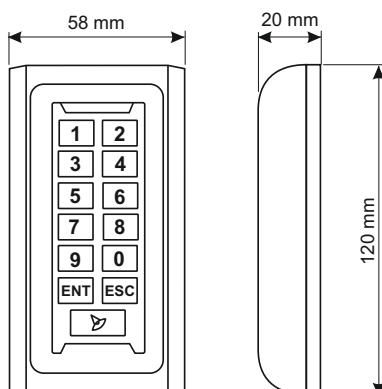


Figure 1. Device Dimensions.

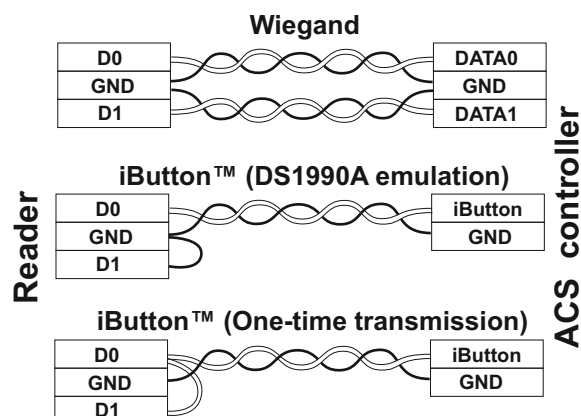


Figure 2. Choosing the transmission protocol.

Table 1. Connection to controller.

Wire colour	Wire Purpose
Red	+12 V
Black	GND - Common
Green	DATA0
White	DATA1
Orange	LED-G - Green LED external control
Brown	LED-R - Amber LED external control
Yellow	BEEP - Buzzer external control
Blue	SYNC – Reader synchronisation
Pink	BELL – Output to external ringer

3. OPERATION

Using Proximity cards or key fobs:

When a token is entering the reader working zone, its token ID is acquired. If successful, it is acknowledged by a short green LED blink and a buzzer signal. While the card stays within working zone, the white LED shines and keypad backlighting is on. The acquired code is transferred to the controller in iButton™ (Dallas Touch Memory) or Wiegand-26/Wiegand-42 format, depending on the chosen transmission protocol settings.

Anti-Clone function:

The main feature of this reader is protection ability against cloned cards. When a cloned card with a copied card number is presented to the reader, it is recognised as cloned; this allows to prevent entry using cloned cards if necessary.

To activate Anti-Clone function, refer to Table 2, Reader settings.

Using reader keypad:

The keypad enables to enter the identification code manually. The valid keys for code entry are the decimal digits 0...9. The pressed keys codes are stored in the reader input buffer, and only are actually transferred into controller when ENT key is pressed.

Each key press is accompanied with a short buzz. When entering the code from keypad, blue LED is blinking.

If within 20 s no keys were pressed, the input buffer is cleared, the reader issues a long signal, the red LED comes on and the reader goes back into standby mode. If one of the digits was entered incorrectly, press ESC key to clear input buffer and enter the correct digits again.

The allowed code length depends on the chosen output interface protocol:

- For Wiegand-26 and 3-byte iButton™ 1...6 digits;
- For Wiegand-42 and 5-byte iButton™ 1...10 digits.

Note: to choose the output interface protocol, please refer to Table 2.

When the BELL key is pressed, within the reader the BELL output is connected to GND (common). The external ringer must be connected to the Red (+12V) wire by its positive terminal, and to the Pink (BELL) wire by its negative terminal.

Table 2. Configuration codes

Digit No.	Parameter value	Function description	Factory default
1	0 or 1	Active level for external red LED control	0
2	0 or 1	Active level for external green LED control	0
3	0 or 1	Active level for external buzzer control	0
4	0, 1, 2, 3	0: ENT transmits all entered digits (Card emulation) 1: Each keypress transmits 8 bits (hid-09: in verse and straight key code) 2: Each keypress transmits 4 bits (hid-00: straight key code) 3: Each keypress transmits 6 bits (hid-11: straight key code+ 2 parity bits)	0
5	0 or 1	Anti-clone Mode: 0 – OFF, 1 – ON	0
6	0 or 1	0: 3-byte iButton™, Wiegand-26 compatible 1: 5-byte iButton™	1
7	0 or 1	0: Wiegand-26, 1: Wiegand-42	0
8	0, 1, 2, 3	0: Connection protocol: according to Figure 2 1: Connection protocol: Wiegand 2: Connection protocol: iButton™ 3: Connection protocol: iButton™ (one-time transfer)	0
9	0 or 1	Keys buffer iButton™ transmission, 1 st byte: 0 – 0x01, 1 – 0x03.	0

Internal indication:

The visual indication on the reader comprises four LEDs: red, green, blue and white, and audial indication is done through a built-in buzzer.

The blue LED comes up after powering up the reader and keeps blinking for 3...5 sec. Then red LED comes up the reader is now in stand-by for card mode. White LED indicates that a card is found within working zone. Blue LED is blinking while entering a code from the keypad. A short blink of the green LED and one buzzer signal indicate successful card code reading.

External indication:

The reader allows for external indication control for red and green LEDs and the built-in buzzer. External indication is performed by controller by shorting the corresponding indication control input to common wire (-). The variants of external indication control can be found in Table 2. External indication control can work alongside internal indication control, so that only channel(s) where an external control signal was received at least once, would switch to external control (and the rest will stay under internal control).

Synchronisation:

When two readers are installed too close (closer than 20 cm from one another), the synchronisation feature must be used. Connect blue wires (SYNC) on the readers for that. This will ensure that the readers operate correctly even under interference.

4. CONFIGURATION

This procedure is used to change parameters if the user so wishes, and to restore factory defaults. The setup procedure requires to change all 9 parameters, the partial change is not supported. Hence, please define all parameter values before starting the parameters change procedure. If a parameter purpose is unclear, we recommend to keep its default value.

Entering configuration mode:

- 1) Power off the reader.
- 2) Press and hold down the ENT key on the keypad.
- 3) With the ENT key still pressed, power on the reader. The blue LED will blink.
- 4) After 15 s the reader produces a sound and turn on the green LED.
- 5) Release the ENT key and the reader will enter configuration mode. The blue and red LED will start to blink alternately. The reader is now ready to configure the parameters, as per Table 2. (If within 15 s the configuration will not begin, all the parameters will be restored to factory defaults.)
- 6) Enter the digits on the reader's keypad. The delay between digits must not exceed 15 s. If an invalid digit for this parameter is entered, triple signal will sound; you can continue entering the digits after that.
- 7) After the last, 9th digit is entered, the reader issues five signals followed by one long signal while the green LED comes on. The parameters new values are saved and the reader leaves configuration mode.
- 8) If a delay between the digits exceeds 15 s, the reader issues ten signals while the red LED comes on, and leaves the configuration mode, discarding all parameters changes.

Restoring factory defaults:

If no keys were pressed within 15 s after configuration mode has started, the reader restores the factory defaults and reverts to normal operation. The green LED will come on and a long signal will sound.

5. SPECIFICATIONS

Working frequency: 125 kHz
Supported token types:EM-Marine, HID (ProxCard II) and Atmel 5557 (Temic)
Minimum reading distance:
-For EM-Marine, Atmel 5557 (Temic): 5 cm
-HID (ProxCard II): 3 cm
Output interfaces: . iButton™ (Dallas Touch Memory), Wiegand-26 or Wiegand-42.
Maximum line distance to controller by protocol:
-iButton™: 15 m
-Wiegand: 100 m
Power supply voltage:12 V DC.
Consumption current:max 150 mA
Maximum Ringer output (BELL) current:1.3A
Operation mode indication:Audial and Visual.
External indication control:Audial and Visual.
Casing materials:Silumin, Plastic.
Dimensions, mm:120 x 58 x 20.
Weight:500 g.

6. PACKAGE CONTENTS

-**Matrix-IV EHT Keys Metal Reader:**1
-User Manual:1

7. OPERATING CONDITIONS

Ambient temperature: -30...40°C.

Humidity: ≤ 98% at 25°C.

When operating under non-recommended conditions, device parameters can deviate from specified values.

The reader must be operated in absence of: precipitation, direct sunlight, sand, dust, and moisture condensation.

8. LIMITED WARRANTY.

This Device is covered by limited warranty for 12 months since the purchase date, but no later than 18 months from the manufacture date.

The warranty becomes void, if:

- this Manual's guidelines are not followed;
- the device has suffered physical damage;
- the device has visible traces of exposure to moist and/or aggressive chemicals;
- the device circuits have visible traces of tampering by unauthorised parties.

Under this warranty, the Manufacturer shall repair the device or replace any broken parts as required, free of charge, in cases where the fault is caused by a Manufacturer's defect.

The planned service time for this device: 6 years.

9. TRANSPORTATION AND STORAGE.

The packaged device can be transported in any covered vehicle at the temperatures within -50...50°C range, while protected from atmospheric precipitation, direct sunlight and mechanical damage, and transported according to general safety rules for this transportation mode according to GOST 23088-80 industry standard of Russian Federation.

The device must be stored under Group L conditions according to GOST 15150-69 industry standard of Russian Federation: ambient temperatures within 5...40 °C, humidity up to 98%.

The maximum storage time for this device is 5 years.

10. CONTACTS

Authorized representative in the European Union:

ICONCONTROL SIA

1B Balta Street, LV - 1055, Riga, Latvia

E-mail: info@iconcontrol.lv

Phone: +371 24422922

www.iconcontrol.lv



The symbol of crossed-through waste bin on wheels means that the product must be disposed of at a separate collection point. This also applies to the product and all accessories marked with this symbol. Products labeled as such must not be disposed of with normal household waste, but should be taken to a collection point for recycling electrical and electronic equipment. Recycling helps to reduce the consumption of raw materials, thus protecting the environment.

