


# Keypad RFID Reader

(1-Wire Protocol)

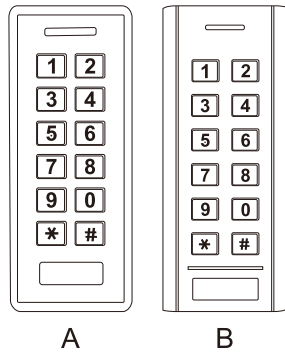

User Manual  
(20231227\_V1)

## 1. Introduction

It is a waterproof 1-Wire Protocol Keypad RFID reader, can be mounted either indoor or outdoor in harsh environments.

### Features:

- Standard 1-Wire protocol
- Power Supply: 9-80V DC
- Built-in antenna
- Supports 125kHz EM & 125kHz HID & 13.56MHz Mifare cards
- Low Power consumption
- Built-in buzzer
- Read range up to 8cm
- Waterproof, conforms to IP66


### Specification:

Operation Voltage	9-80V DC
Standby Current	≤35mA
Frequency	125KHz & 13.56MHz
Card Type	125KHz HID & EM cards, 13.56MHz NXP Mifare, Mifare Plus, DesFire, Mifare Pro, Mifare UltraLight, Mifare Class 4K, NFC and CPU cards
Operation Temperature	-40°C~ +60°C
Physical	ABS
Color	Black/ Ivory optional
Index of Protection	IP66
Dimension	A: L 122 x W50 x D21 mm B: L 120 x W50 x D20 mm
Net Weight	A: 155g B: 150g
Shipping Weight	A: 210g B: 200g

-01-

## 2. Installation

- Drill 2 holes(A, C) on the wall for the screws and one hole (B) for the cable
- Knock the rubber bungs to the holes (A,C)
- Fix the back cover on the wall with 2 screws
- Thread the cable though the cable hole (B)
- Attach the unit to the back cover

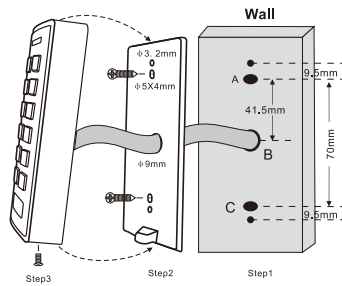


### Wiring

Color	Function	Notes
Red	Power+	9-80V DC Power Input
Black	GND	Ground
Green	1-Wire	1-Wire Data
Yellow	Feedback Input	Controlling LED/BUZZER

-02-

## Connection

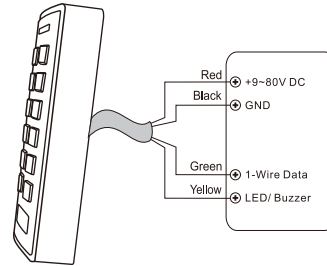

## 3. Packing List

Name	Quantity
Keypad Reader	1
Manual	1
Wall Fixing Plugs	2
Self Tapping Screws	2

-03-